






EFC 211 fan control



READ AND SAVE THESE INSTRUCTIONS!

- | | | |
|---|--|-----------------------|
|  | Product information | Chapters 1 + 2 |
|  | Mechanical installation | Chapter 3 |
|  | Electrical installation | Chapter 4 |
|  | Start up and configuration | Chapter 5 |
|  | Maintenance and troubleshooting | Chapter 6 |

USA

CAN

Job name: _____

Installer: _____

Installation date: _____

Distributor contact information:
ENERVEX Inc. • T: 800.255.2923
info@enervex.com • www.enervex.com

exodraft[®]
CHIMNEY DRAFT TECHNOLOGY

1. Product Information	1.1 Product Information	3
	1.2 Shipping	3
	1.3 Warranty	3
2. Specifications	3.1 Dimensions & Capacities	5
3. Mechanical Installation	4.1 Location	6
4. Electrical Installation	5.1 Terminal Connections	7
5. Startup and Configuration	6.1 Pre-Operation Inspection	8
	6.2 Setting the Control	8
	6.3 Surveillance	8
	6.4 Alarm Functions	8

Symbol legend

The following terms are used throughout this manual to bring attention to the presence of potential hazards or to important information concerning the product.



DANGER
Indicates an imminent hazardous situation which, if not avoided, will result in death, serious injury or substantial property damage.



CAUTION
Indicates an imminent hazardous situation which, if not avoided, may result in personal injury or property damage.



TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

1. Use this unit in the manner intended by the manufacturer. If you have questions, contact the manufacturer's distributor at the address or telephone number listed on the front of the manual.
2. Before servicing or cleaning the unit, switch off at service panel and lock service panel to prevent power from being switched on accidentally.
3. Installation work and electrical wiring must be done by a qualified person(s) in accordance with applicable codes and standards.
4. Follow the appliance manufacturer's guidelines and safety standards such as those published by the National Fire Protection

Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.

5. This unit must be grounded.

How to use this manual

This installation manual does not contain any system design documentation. System design documentation is available from ENERVEX.

Accessories and variable frequency drives are not covered by this manual. Please refer to these component's individual manuals.

1. Product Information

1.1 Function

Use

The **exodraft** EFC211 Fan Control is used with wood-fired heating appliances to monitor and maintain proper draft. This is achieved by maintaining the proper speed of a chimney fan. The EFC 211 is designed for use with **exodraft** Models RS or GSV.

The intended use of the control includes, but is not limited to:

- Controlling the speed of a chimney fan used with a wood-fired fireplace or stove
- Controlling the speed of a chimney fan used with a wood-fired pizza oven in a restaurant kitchen

For indoor installation only.

Function

The EFC211 consists of a control box and a speed control unit. The control box is installed on the outside of the chimney or inside an attic. The speed control unit is installed in the room where the heating appliance is located.

The fan control should be set to produce the desired fan speed or draft. The chimney fan starts with a 15 second boost to assure proper fan operation. At the same time, the green LED on the control panel will flash. After the 15 seconds, the chimney fan will continue to operate at the set speed.

During operation the fan speed can be adjusted using the dial, which is also used to turn the fan on and off. The control measures the current draw of the motor every minute to determine if there is adequate draft in the chimney. If there is not, the control will send a signal to briefly increase the fan speed.

If the draft remains inadequate, the fan speed will increase to maximum speed for 15 seconds. During this time the green LED will flash - as it does during start up. If the draft is adequate the chimney fan will continue to operate at the set speed.

A green LED flashing during normal operation (after start up) is an indication that the minimum current in the power supply is set too low for the fan to operate. The factory setting for the motor power supply is 65 VAC.

If the red LED flashes and the buzzer sounds, it can be caused by:

- Blocked Flue
- Defective chimney fan
- Disconnected power supply

The control can be reset, and the alarm turned off, by pressing the reset button for 1-2 seconds.

When used with a solid-fuel fired appliance a smoke detector shall be installed and maintained in accordance with NFPA72, National Fire Alarm Code.

1.2 Shipping

The EFC 211 contains the following:

- Control box
- Speed Control Unit
- User manual

1.3 Warranty

Complete warranty conditions are available from ENERVEX.

EFC 211 Control Components

The **exodraft** EFC 211 control is built up around a main control units that controls all basic functions. The main control units controls the draft or exhaust function. It is connected directly to the power supply and feeds power to the **exodraft** chimney fan. The main control unit is shown below in Fig. 1:

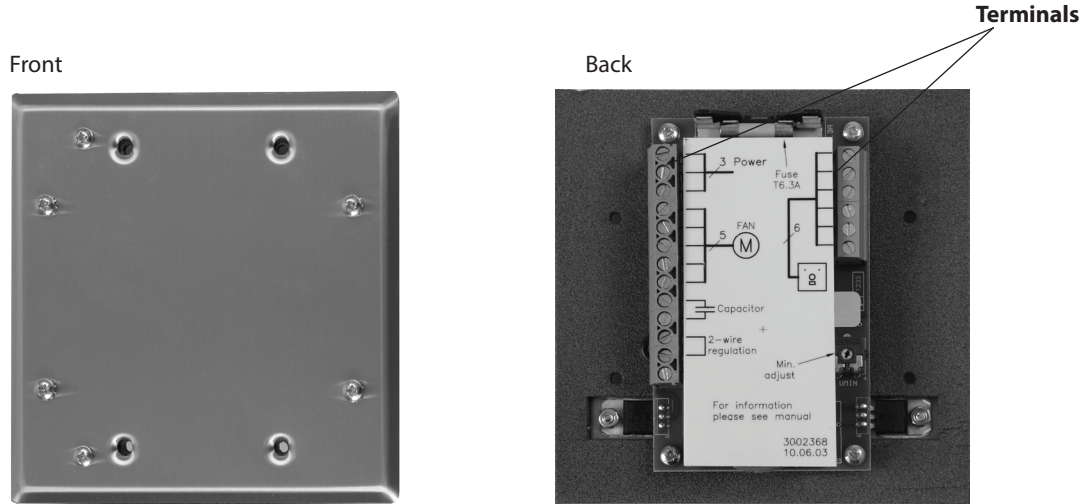


Fig. 1

The front panel serves as a cover for a 4x4 junction, while the control unit is mounted on the back of the cover. The board contains the wiring terminals as well as the triac used to control the speed of the **exodraft** chimney fan. The board is protected by a fuse.

The speed control unit is connected to the main control unit. The speed control unit is shown below in Fig. 2:

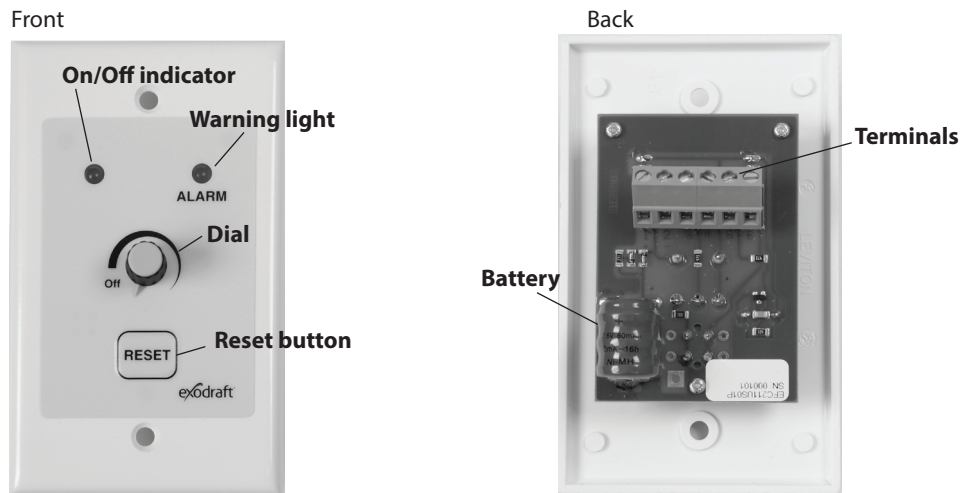


Fig. 2

The speed control unit is used to turn the chimney fan on and off, set the fan speed and monitor the operation. It has indicator lights to confirm operation and to warn in case of malfunctions. The control has an audible alarm that sounds in case of power failure or other failure involving the chimney fan.

The control unit has a rechargeable battery back-up used to operate the control's safety functions.


2. Specifications

2.1 Dimensions & Capacities

Specifications


EFC 211 Speed Control Unit		
Power supply	V	1x120VAC
Amperage	A	5.8
Operating temperature	°F/°C	-4 to 122/-20 to 50
Output	VAC	10-120
Dimensions	Width D in/mm	2.73/69
	Height E in/mm	4.44/113
	Depth in/mm (excl. knob)	1.00/25
Weight	lbs/kg	1.3/0.6

Speed Control Unit

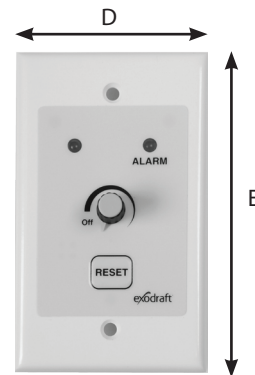

EFC 211 Main Control Unit		
Power supply	V	1x120VAC
Amperage	A	5.8
Operating temperature	°F/°C	-4 to 122/-20 to 50
Dimensions	Width A in/mm	4.56/116
	Height B in/mm	4.56/116
	Depth in/mm	1.00/25
Weight	lbs/kg	1.3/0.6

Main Control Unit

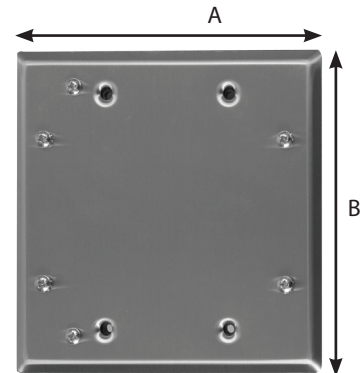

3. Mechanical Installation


6

3.1 Location

The main control unit can be installed indoors as well as outdoors. It fits a standard 4x4 weatherproof junction box, like the one that is supplied with the chimney fan. An extension ring must be used as shown on fig. 3:

Fig. 3

Shows the control taken apart on the side of the chimney

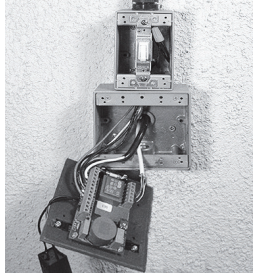

Shows the control mounted on side of chimney



The speed control unit can only be installed indoors. It fits a standard 2x4 wall box. See fig. 4

Fig. 4

Shows the control taken apart outside the wall box



Shows the control mounted on a wall



4. Electrical Installation

4.1 Terminal Connections




Danger: Turn off electrical power before servicing. Contact with live electric components can cause shock or death.



EFC 211 is designed for 1x120VAC power supply only.

The terminals are connected as shown on Fig. 9:

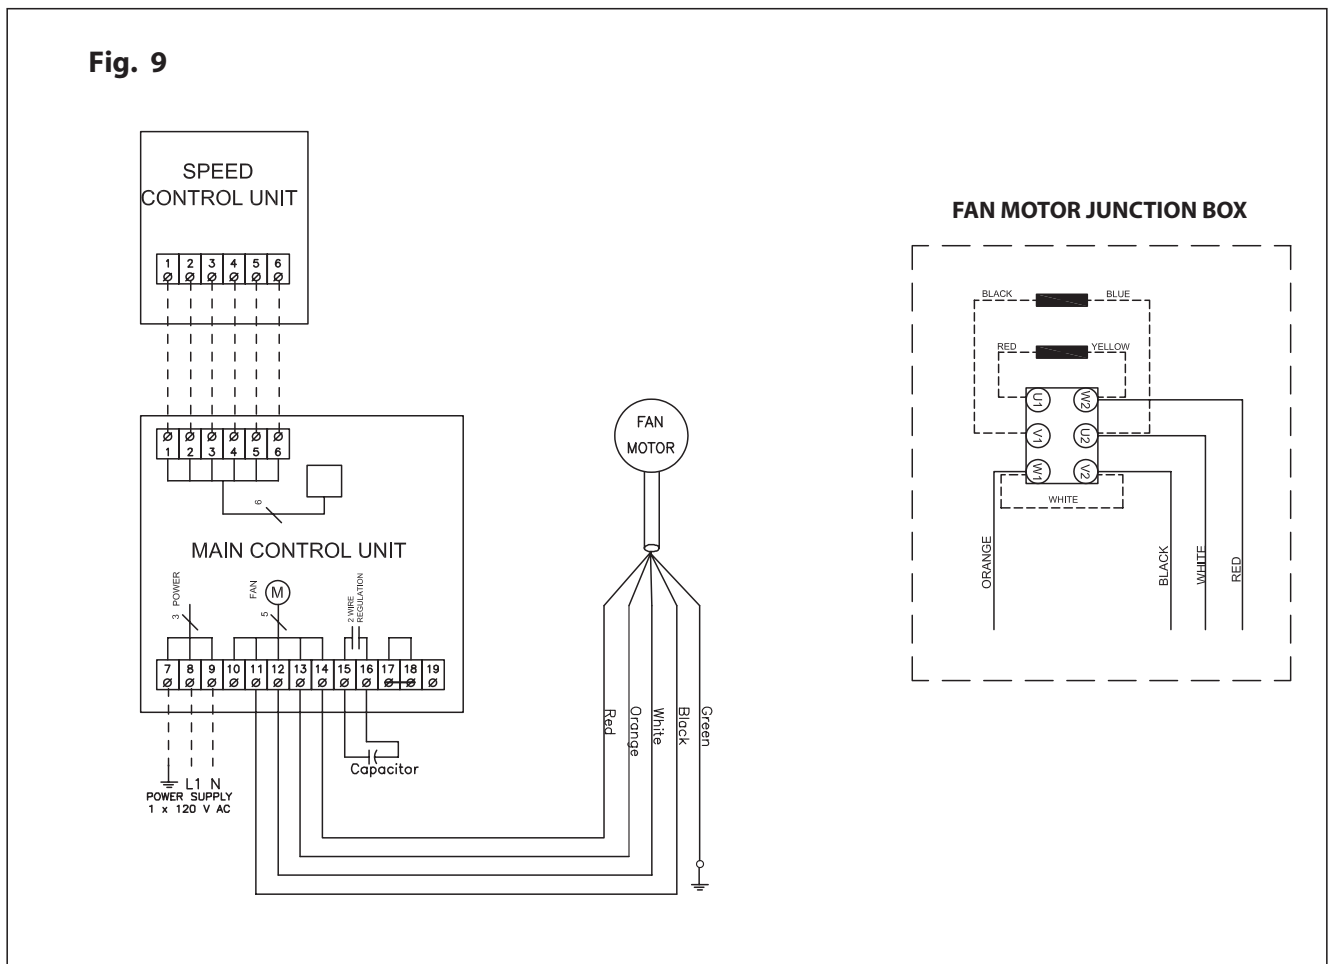



ENERVEX Inc.
1685 Bluegrass Lake Parkway
Alpharetta
GA 30004

P: 770.587.3238
F: 770.587.4731
T: 800.255.2923
info@enervex.com
www.enervex.com

5. Startup and Configuration

5.1 Pre-Operation Inspection

After mounting and wiring has been completed, check the control for the following items before applying power:

- Check for wiring errors.
- Verify that there are no wiring chips, screws, etc. remaining inside the junction boxes.
- Check that all screws and terminal connections are tight.
- Verify that no exposed wire ends are touching other terminals.

Apply power to the control. Let the control be turned on for 12 hours to allow the battery to be charged.



Warning: Make sure the battery is fully charged before using the solid-fuel appliance. Failure to charge the battery will prevent the control from provide safe operation.

5.2 Setting the Control

Turn the control on by turning the knob clockwise. A “click” is heard when knob is turned which indicates the control is turned on. Adjust the knob to the desired speed. The speed must be set so no smoke escapes the solid fuel heating appliances (fireplace, stove, wood-fired oven etc.) through the opening into a room. The smoke should safely be exhausted through the chimney.

The chimney fan will start with a 15 seconds boost to assure proper fan operation. The green LED on the speed control unit cover will flash

After the 15 seconds the chimney fan will continue to operate at the desired speed.

During appliance operation the speed setting can be adjusted.

5.3 Surveillance

The control constantly monitors the chimney fan operation. It automatically measures the fan speed every minute and if necessary, it will increase the speed which can be heard as quiet “hick-up” from the fan.

If necessary, the control will increase the speed to full speed for 15 seconds (green LED flashes), after which, if possible, it will slow the fan speed down to the desired speed.

5.4 Alarm Functions

If the green LED flashes during operation (after the 15 seconds initiation) the fan speed is set too low or the fan wheel is somehow obstructed.

If the red LED flashes and the buzzer sounds, it can be caused by:

- Defective chimney fan
- Disconnected power supply

The control can be reset, and the alarm turned off, by pressing the RESET button for 1-2 seconds.